



Lifting module Shop-Floor

manual-hydraulic and electro-mechanical version

1	Manual-hydraulic version	1
2	Electro-mechanical version	10

1 Manual-hydraulic version



Table of contents

1.1	Description of the product	1
1.2	Validity of the documentation	1
1.3	Target group of this document	1
1.4	Symbols and signal words.....	1
1.5	For your safety	2
1.6	Personal protective equipment.....	2
1.7	Application	3
1.8	Installation	3
1.9	Start up	4
1.10	Maintenance	5
1.11	Trouble shooting.....	6
1.12	Technical characteristics	6
1.13	Accessory	6
1.14	Disposal.....	7
1.15	Declaration of conformity.....	8
1.16	Declaration of conformity.....	9

1.1 Description of the product

The lifting module Shop-Flor is particularly suitable for lifting and lowering assembly fixtures, working tables and demonstration objects in industrial applications as well as for medical treatment equipments in medical applications.

In general lifting modules are used as base unit of devices for controlled lifting and lowering of loads or for height adjustment only.

1.2 Validity of the documentation

This document applies to the following products:

Manual-hydraulic lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-02-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-04-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-06-20-H, -30-H, -40-H, -50-H, -60-H

1.3 Target group of this document

- Specialists, fitters and set-up men of machines and installations with hydraulic expert knowledge.

Qualification of the personnel

Expert knowledge means that the personnel must

- be in the position to read and completely understand technical specifications such as circuit diagrams and product-specific drawing documents,
- have expert knowledge (electric, hydraulic, pneumatic knowledge, etc.) of function and design of the corresponding components.

An **expert** is somebody who has due to its professional education and experiences sufficient knowledge and is familiar with the relevant regulations so that he

- can judge the entrusted works,
- can recognize the possible dangers,
- can take the required measures to eliminate dangers,
- knows the acknowledged standards, rules and guidelines of the technology.
- has the required knowledge for repair and mounting.

1.4 Symbols and signal words

WARNING

Person damage

Stands for a possibly dangerous situation.

If it is not avoided, death or very severe injuries will result.

CAUTION

Easy injuries / property damage

Stands for a possibly dangerous situation.

If it is not avoided, minor injuries or material damages will result.



Hazardous to the environment

The symbol stands for important information for the proper handling with materials that are hazardous to the environment.

Ignoring these notes can lead to heavy damages to the environment.



Mandatory sign!

The symbol stands for important information, necessary protection equipment, etc.

NOTE

- This symbol stands for tips for users or especially useful information. This is no signal word for a dangerous or harmful situation.

1.5 For your safety

1.5.1 Basic information

The operating instructions serve for information and avoidance of dangers when installing the products into the machine as well as information and references for transport, storage and maintenance.

Only in strict compliance with these operating instructions, accidents and property damages can be avoided as well as trouble-free operation of the products can be guaranteed.

Furthermore, the consideration of the operating instructions will:

- avoid injuries
- reduce down times and repair costs,
- increase the service life of the products.

1.5.2 Safety instructions

The product was manufactured in accordance with the generally accepted rules of the technology.

Observe the safety instructions and the operating instructions given in this manual, in order to avoid personal damage or material damage.

- Read these operating instructions thoroughly and completely, before you work with the product.
- Keep these operating instructions so that they are accessible to all users at any time.
- Pay attention to the current safety regulations, regulations for accident prevention and environmental protection of the country in which the product will be used.
- Use the ROEMHELD product only in perfect technical condition.
- Observe all notes on the product.
- Use only accessories and spare parts approved by the manufacturer in order to exclude danger to persons because of not suited spare parts.
- Respect the intended use.
- You only may start up the product, when it has been found that the incomplete machine or machine, in which the product shall be mounted, corresponds to the country-specific provisions, safety regulations and standards.
- Perform a risk analysis for the incomplete machine, or the machine.

Due to the interactions between the product and the machine/fixture or the environment, risks may arise that only can be determined and minimized by the user, e.g.:

- generated forces,
- generated movements,
- Influence of hydraulic and electrical control,
- etc.

1.5.3 Warning

⚠ WARNING

Injuries due to misuse, incorrect operation or abuse!

Injuries can occur if the product is not used within the intended use and the technical performance data.

- Before start up, read the operating instructions!

1.6 Personal protective equipment



For works at and with the product,
wear safety goggles!



For works at and with the product,
wear protective gloves!



For works at and with the product,
wear safety shoes!

1.6.1 Safety devices

The below safety devices are for the safety of the operators. As a matter of principle no safety devices may be detached, put out of action or modified.

Used safety devices

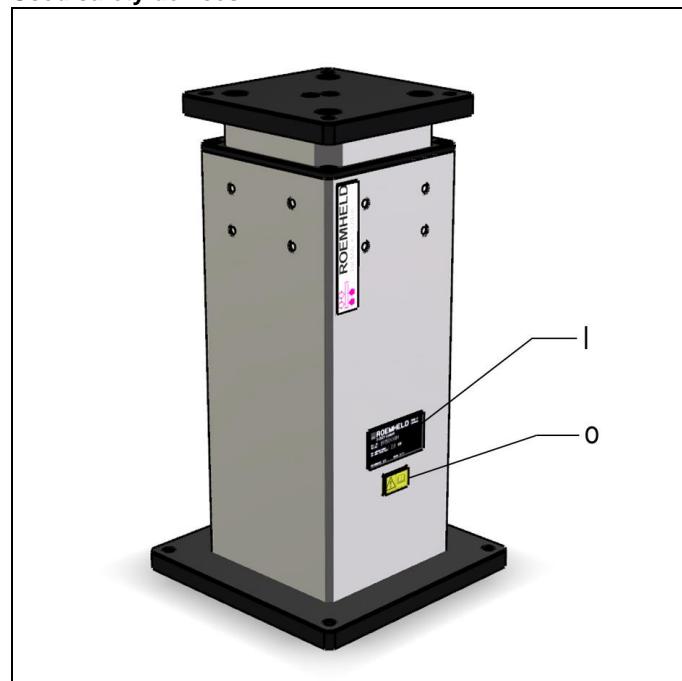


Figure 1: Positions of the safety devices

I	Name plate with details of max. load, etc. (position can vary)	O	Mandatory sign "Read and follow the operation instructions"
---	--	---	---

1.6.2 Check the safety devices

NOTE

Use the regulations

- To check the safety device use the check lists "General examination" and / or "Functional testing". Eliminate immediately recognised defects at the safety devices.

Testing intervals

- at the beginning of every shift
- once a week in case of continuous shift
- after each maintenance or repair

Testing content

- Function
- State and position
- Safe fixing

General examination

Covers	Number, available and undamaged
Screw plugs	Number, available and undamaged
Name plates with specifications	Number, available, readable and undamaged
Danger signs	Number, available and undamaged
Mandatory signs	Number, available and undamaged
Further safety devices available	available, undamaged and ready for operation
Testing date:	Tester (signature):

(Number see "Position of safety devices")

1.7 Application
1.7.1 Intended use

The products are used in industrial / commercial applications to transform hydraulic pressure into movement and /or force. They must only be operated with hydraulic oil.

Furthermore the following belongs to possible uses:

- Use within the capacity indicated in the technical characteristics.
- Use as per operating instructions.
- Compliance with service intervals.
- Qualified and trained personnel for the corresponding activities.
- Mounting of spare parts only with the same specifications as the original part.

1.7.2 Misapplication
⚠ WARNING
Injuries, material damages or malfunctions

- Do not use damaged or worn components.

Injuries, material damages or malfunctions!

Modifications can lead to weakening of the components, reduction in strength or malfunctions.

- Do not modify the product!

The use of the products is not authorised:

- For domestic use.
- For use at fairgrounds and amusement parks.
- In food processing or in areas with special hygiene regulations.
- In mines.
- In ATEX areas (in explosive and aggressive environments, e.g. explosive gases and dusts).
- If physical effects (welding currents, vibrations or others) or chemically acting media damage the seals (resistance of

the seal material) or components and this can lead to functional failure or premature failure.

- For applications other than vertical lifting of loads. Hanging operation (e. g. from the ceiling) is inadmissible.

Special solutions are available on request!

1.8 Installation
1.8.1 Design
⚠ WARNING
Injury by dropping parts!

Some products have a heavy weight and can cause injury when dropping.

- Transport products professionally.
- Wear personal protection equipment!

Weight specifications see chapter "Technical characteristics".

⚠ CAUTION
Heavy weight may drop

- Some product types have a considerable weight. These have to be secured against dropping during transport.
- Weight specifications see chapter "Technical characteristics".

Transverse forces and forced conditions!

Side loads and forced conditions on the product lead to the premature failure.

- Avoid forced conditions (overdetermination) of the product.
- Max. forces and torques see technical characteristics.

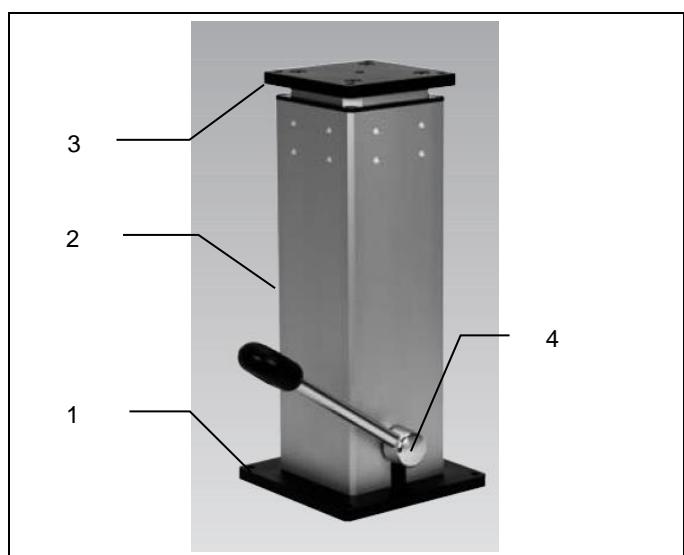


Figure 2: components

1	Bottom plate	3	Top plate
2	Guide unit	4	Lifting jack with foot pedal

1.8.2 Fixing of the product

⚠️ WARNING

Injury due to overturning product!

- Overturning product due to missing or incorrect fixing!
- Fasten bottom plate on the floor.
- When introducing torques within the load limit (see technical characteristics) we recommend to use an additional base plate (accessory) and to secure this plate correctly.

⚠️ CAUTION

Stroke module, pump lever not operate on bottom base plate

Foot pedal is pressed down below the lower edge of the base plate.

- The customer has to make sure that this will be prevented by the concrete floor or a corresponding base plate connecting construction.

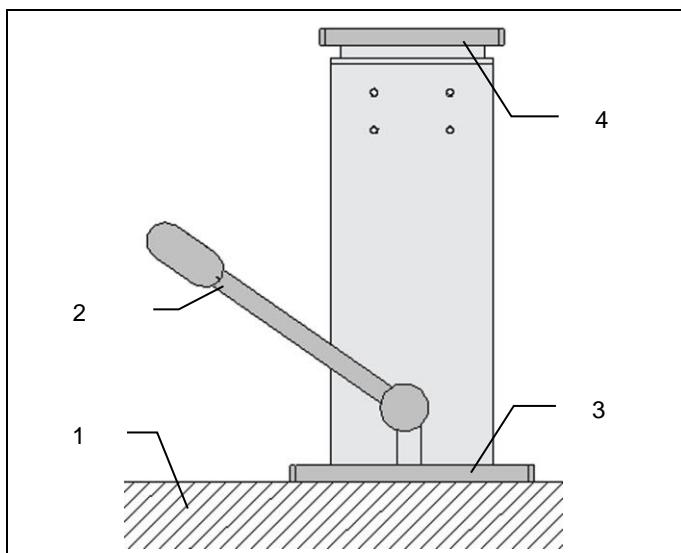


Figure 3: principle of fixing

1 Concrete floor or connecting construction	3 Bottom plate
2 Foot pedal	4 Top plate

1.8.3 Mounting of the customer's connecting construction

⚠️ WARNING

Injury due to overturning product!

- Overturning product due to eccentric load provided by the user!
- The centre of gravity of the user's load must be within the 4 fixing screws of the bottom plate.
- When introducing torques within the load limit (see technical characteristics) we recommend to use an additional base plate (accessory) and to secure this plate correctly.

1. For fixing of the customer's connecting construction there are 4 bore holes (for M10 - Ø 10.5 mm) at the top plate. All provided bore holes have to be used!
2. Fasten the connecting construction at the top plate.

ℹ️ NOTE

Dangers due to the connecting construction of the customer

Dangers due to the connecting construction of the customer, as e.g. squeezing points have to be excluded by the customer's design.

1.9 Start up

⚠️ WARNING

Poisoning due to contact with hydraulic oil.

Wear, damage of the seals, aging and incorrect mounting of the seal kit by the operator can lead to escapes of oil.

Incorrect connection can lead to escapes of oil at the ports.

- For handling with hydraulic oil consider the material safety data sheet.
- Wear protection equipment.

1. Check seating of all screw connections (check tightening torques).

ℹ️ NOTE

Admissible load

The product may only be used with push loads.

The centre of gravity should be within the traverse of the fixing screws.

If this is not observed, there may be a malfunction.

1.9.1 Operation

⚠️ WARNING

Injuries due to non-compliance of the operating instructions!

- The product may only be operated, if the operating instructions - especially the chapter "Safety instructions" have been read and understood.

Injury by crushing!

Components of the product make a movement while they are in operation, this can cause injuries.

- Keep parts of the body and items out of the working area!

Injuries due to misuse, incorrect operation or abuse!

Injuries can occur if the product is not used within the intended use and the technical performance data.

- Before start up, read the operating instructions!

The operator is obliged to report immediately any changes at the product that may affect the safety to the safety expert or to the person who is responsible for safety and to stop operating the product.

1.9.2 Working place

The working place is designed in front of the lifting module.

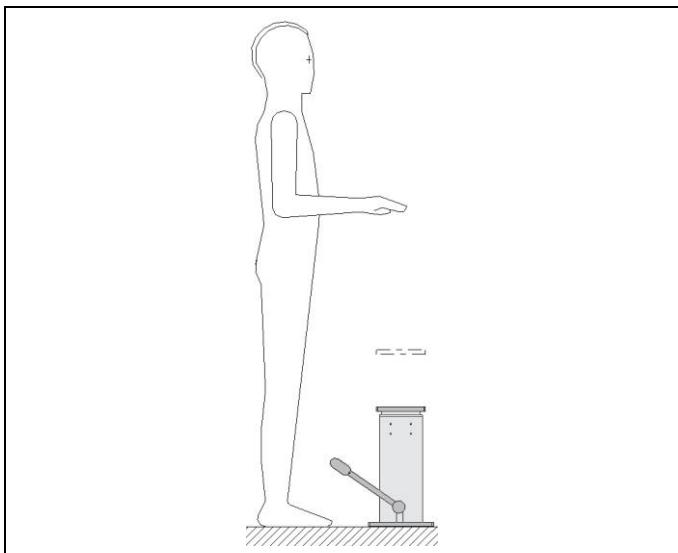


Figure 4: working place

1.9.3 Behaviour in an emergency

In emergencies the product may not be operated.

1.9.4 Lifting

The stroke movement is produced by the internal, hermetically-sealed, hydraulic lifting jack with foot pedal with oil being pumped by means of a piston into a plunger cylinder.

To lift the top plate, the foot pedal has to be depressed by approx. 40° several times. The pedal returns to its off-position by means of a return spring.

1.9.5 Lowering

To lower the top plate, the foot pedal has to be pressed upwards by approx. 10°. Thereby the oil returns due to the weight of the user's load from the plunger cylinder into the reservoir, the top plate lowers.

1.10 Maintenance

1.10.1 Plan for maintenance

Maintenance works	Interval	by...
Cleaning, visual check of the lifting module and inspection of the guide unit	daily	operator
Control of the fixing screws, retighten if required. Control of the guide unit	half-yearly checks	expert
Check smooth running with little load over the entire stroke range	yearly	expert
Check smooth running with load over the entire stroke range	yearly	expert
Check the check valve of the internal lifting jack with load	yearly	expert
Revision by the manufacturer (recommendation)	after 50,000 cycles (lifting and lowering)	ROEMHELD service staff
Repair	in case of damages	ROEMHELD service staff

Note

Pay attention to the qualification of the personnel.

1.10.2 Cleaning

⚠ WARNING

Danger of injury due to a lifting or lowering movement!

- Do not reach into the stroke area during the lifting or lowering movement.

The following cleaning works have to be effected daily at the mechanical components.

1. Clean with cleaning clothes or cleaning rags.
2. Slightly lubricate the metallic components (plates, guides, etc.).

1.10.2.1 Daily checks

⚠ WARNING

Danger of injury due to a lifting or lowering movement!

- Do not reach into the stroke area during the lifting or lowering movement.

- Visual check of the lifting module
- Check the guide unit for damages and possible running marks, repair if required.

1.10.2.2 Half-yearly checks

- Check all fixing screws of the lifting module, retighten if required.
- Check all cable fixings and fittings, retighten if required.
- Check the wear of the guide unit based on the guiding clearance. If the clearance exceeds 0.5 mm, the guiding elements have to be exchanged. (See chapter repair).

1.10.2.3 Yearly checks

To maintain the product in a safe condition and ready for operation, the function safety of the internal lifting jack has to be checked annually by an expert (see maintenance schedule).

1.10.3 Check smooth running of the product with little load over the entire stroke range

⚠ CAUTION

Function of the product!

If the product does not work perfectly, even if only partial stroke ranges are affected, the product must no longer be used.

- Observe the checking intervals.

- Press the foot pedal upwards until the top plate is completely lowered.
- Fix the test weight at the top plate (10% of the nominal load).
- Depress the foot pedal several times until the top plate is completely lifted.
- Press the foot pedal upwards until the top plate is completely lowered.

1.10.4 Check smooth running of the product with load over the entire stroke range

⚠ CAUTION

Function of the product!

If the product does not work perfectly, even if only partial stroke ranges are affected, the product must no longer be used.

- Observe the checking intervals.

- Press the foot pedal upwards until the top plate is completely lowered.
- Fix the test weight at the top plate (nominal load).
- Depress the foot pedal several times until the top plate is completely lifted.
- Press the foot pedal upwards until the top plate is completely lowered.

1.10.5 Check the check valve of the internal lifting jack with load

ℹ NOTE

Operating set

If the top plate of the product lowers independently, it may no longer be operated!

- Press the foot pedal upwards until the top plate is completely lowered.
- Fix the test weight at the top plate (nominal load).
- Depress the foot pedal several times until the top plate is completely lifted.
- Top plate may not lower independently

1.10.6 Repair

ℹ NOTE

Repair works

- Repair works, as e.g. the change of the interior lifting jack may only be effected by the ROEMHELD service technicians.

1.11 Trouble shooting

⚠ CAUTION

All work by service personnel only!

- All works only to be effected by ROEMHELD service staff.

Trouble	Cause	Remedy
Top plate does not lift or lower after the operation of the foot pedal	Internal lifting jack defect	Replace internal lifting jack
Top plate lowers without operation of the foot pedal	Internal lifting jack defect	Replace internal lifting jack

1.12 Technical characteristics

Max. lifting force	2000, 4000, 6000 N
Stroke	200, 300, 400, 500, 600 mm
Function	Manual-hydraulic
Operation	Foot pedal
Lifting profile	Aluminium, colourless anodised
Top and bottom plate	aluminium, black anodised

Type	Lifting force [N]	Pump strokes per 100 mm	Descent speed [mm/s]
8915-02-XX-H	2000	5	45
8915-04-XX-H	4000	7	22
8915-06-XX-H	6000	10	22

Type	Stroke [mm]	Weight [kg]
8915-XX-20-H	200	15
8915-XX-30-H	300	20
8915-XX-40-H	400	25
8915-XX-50-H	500	30
8915-XX-60-H	600	35

Side loads

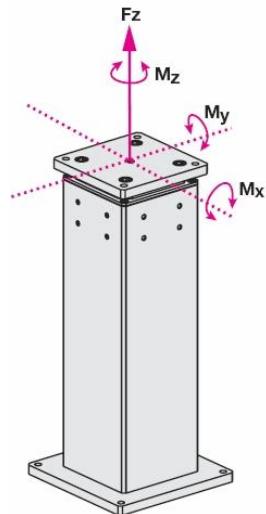


Figure 5: Side loads

Max. load torque M_z	300 Nm
Max. load torque M_x or M_y	500 Nm

Tightening torques

The tightening torques for the fixing screws of the customer's connecting construction are to be taken from the VDI guideline 2230.

Emissions

The A valued continuous sound level is less than 70 dB(A) in operation.

ℹ NOTE

Minimum load to descend

A minimum load of approx. 200N is required to descend the lifting module.

Hydro-manual lifting drive

The hydro-manual lifting drive can not be operated with synchronization control.

1.13 Accessory

NOTE

Accessories

- See data sheet.

1.14 Disposal



Hazardous to the environment

Due to possible environmental pollution, the individual components must be disposed only by an authorised expert company.

The individual materials have to be disposed as per the existing regulations and directives as well as the environmental conditions.

Special attention has to be drawn to the disposal of components with residual portions of hydraulic fluids. The instructions for the disposal at the material safety data sheet have to be considered.

For the disposal of electrical and electronic components (e.g. stroke measuring systems, proximity switches, etc.) country-specific legal regulations and specifications have to be kept.

1.15 Declaration of conformity



Manufacturer

Römheld GmbH Friedrichshütte
Römheldstraße 1-5
35321 Laubach, Germany
Tel.: +49 (0) 64 05 / 89-0
Fax: +49 (0) 64 05 / 89-211
E-mail: info@roemheld.de
www.roemheld.com

Responsible person for the documentation:

Dipl.-Ing. (FH) Jürgen Niesner, Tel.: +49(0)6405 89-0.

This declaration of conformity applies to the following products:

Manual-hydraulic lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-02-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-04-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-06-20-H, -30-H, -40-H, -50-H, -60-H

We hereby declare that the machine described in its design and construction as well as in the version we have placed on the market complies with the essential health and safety requirements according to the following EC directives.

The following additional EU directives were applied:

- **2006/42/EC**, Machinery directive [www.eur-lex.europa.eu]

The following harmonised standards have been applied:

Product Safety Act - ProdSG; [editor: Federal Ministry of Justice and Consumer Protection, Germany]

DIN EN ISO 12100, 2011-03, Safety of machinery; Basic concepts, General principles for design (replacement for part 1 and 2)

EN 1494; 2008, Mobile or movable jacks and associated lifting equipment

DIN EN ISO 4413, 2011-04, Hydraulic fluid power - General rules and safety requirements for systems and their components

The technical documents according to the specified guidelines were created for the products.

The manufacturer obligates to provide the special documentation of the products to national authorities on demand.

If the product is modified and not approved by us, this declaration will become invalid.

Laubach, 17.01.2025



Ewgeni Schleining
Development Team Leader MH

Römheld GmbH
Friedrichshütte

1.16 Declaration of conformity



If the product is modified and not approved by us, this declaration will become invalid.

SG4 0TY Hitchin, 17.01.2025



Importer

Roemheld (UK) Limited
28 Knowl Piece, Wilbury Way,
SG4 0TY Hitchin

E-Mail: sales@roemheld.co.uk
www.roemheld.co.uk

Darren Rowell
Managing Director,

Roemheld UK Ltd

Authorised person to compile the technical documentation:

Darren Rowell, 28 Knowl Piece, Wilbury Way, SG4 0TY
Hitchin.

This declaration of conformity applies to the following products:

Manual-hydraulic lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-02-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-04-20-H, -30-H, -40-H, -50-H, -60-H
- 8915-06-20-H, -30-H, -40-H, -50-H, -60-H

We hereby declare that the machine described in its design and construction as well as in the version we have placed on the market complies with the essential health and safety requirements according to the following UKCA directives.

The following additional UKCA directives were applied:

- **Directive 2008 No. 1597**, Health and Safety

The following harmonised standards have been applied:

Product Safety Act - ProdSG; [editor: Federal Ministry of Justice and Consumer Protection, Germany]

DIN EN ISO 12100, 2011-03, Safety of machinery; Basic concepts, General principles for design (replacement for part 1 and 2)

EN 1494; 2008, Mobile or movable jacks and associated lifting equipment

DIN EN ISO 4413, 2011-04, Hydraulic fluid power - General rules and safety requirements for systems and their components

The technical documents according to the specified guidelines were created for the products.

The manufacturer obligates to provide the special documentation of the products to national authorities on demand.

2 Electro-mechanical version



Table of contents

2.1	Description of the product	10
2.2	Validity of the documentation	10
2.3	Target group of this document	10
2.4	Symbols and signal words.....	10
2.5	For your safety	11
2.6	Application.....	12
2.7	Installation	12
2.8	Start up	13
2.9	Operation.....	14
2.10	Handling emergency situations	14
2.11	Maintenance	15
2.12	Trouble shooting.....	15
2.13	Technical characteristics	15
2.14	Accessory	17
2.15	Disposal.....	17
2.16	Declaration of conformity.....	18
2.17	Declaration of conformity.....	19

2.1 Description of the product

The lifting motion is generated by an electric motor with a spindle lifting gear.

The electrically operated variant is particularly suitable for positioning and adjusting tasks of working tables as well as for material supply and transport.

It excels by a smooth running.

Operation

Lifting and lowering is triggered by push-buttons with touch control contact. After release of the push-button, the motion will be immediately stopped.

Synchronization

Up to 4 lifting modules can be operated with synchronization control by a corresponding supply unit.

For example complete lifting platforms can be designed.

For operation with synchronization control only lifting modules with identification letter G are suitable.

Supply units with synchronization control for 2, 3, or 4 lifting modules are available.

2.2 Validity of the documentation

This document applies to the following products:

Electro-mechanical lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-01-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-02-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-04-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-06-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-02-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-04-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-06-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-02-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-04-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-06-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-01-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-02-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-04-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-06-20-B, -30-B, -40-B, -50-B, -60-B

2.3 Target group of this document

- Experts for installation and maintenance with electro-mechanical know-how.

Qualification of the personnel

Expert knowledge means that the personnel must

- be in the position to read and completely understand technical specifications such as circuit diagrams and product-specific drawing documents,
- have expert knowledge (electric, hydraulic, pneumatic knowledge, etc.) of function and design of the corresponding components.

An **expert** is somebody who has due to its professional education and experiences sufficient knowledge and is familiar with the relevant regulations so that he

- can judge the entrusted works,
- can recognize the possible dangers,
- can take the required measures to eliminate dangers,
- knows the acknowledged standards, rules and guidelines of the technology.
- has the required knowledge for repair and mounting.

2.4 Symbols and signal words



Person damage

Stands for a possibly dangerous situation.

If it is not avoided, death or very severe injuries will result.

⚠ CAUTION

Easy injuries / property damage

Stands for a possibly dangerous situation.

If it is not avoided, minor injuries or material damages will result.



Hazardous to the environment

The symbol stands for important information for the proper handling with materials that are hazardous to the environment.

Ignoring these notes can lead to heavy damages to the environment.



Mandatory sign!

The symbol stands for important information, necessary protection equipment, etc.

ℹ NOTE

- This symbol stands for tips for users or especially useful information. This is no signal word for a dangerous or harmful situation.

2.5 For your safety

2.5.1 Basic information

The operating instructions serve for information and avoidance of dangers when installing the products into the machine as well as information and references for transport, storage and maintenance.

Only in strict compliance with these operating instructions, accidents and property damages can be avoided as well as trouble-free operation of the products can be guaranteed.

Furthermore, the consideration of the operating instructions will:

- avoid injuries
- reduce down times and repair costs,
- increase the service life of the products.

2.5.2 Safety instructions

The product was manufactured in accordance with the generally accepted rules of the technology.

Observe the safety instructions and the operating instructions given in this manual, in order to avoid personal damage or material damage.

- Read these operating instructions thoroughly and completely, before you work with the product.
- Keep these operating instructions so that they are accessible to all users at any time.
- Pay attention to the current safety regulations, regulations for accident prevention and environmental protection of the country in which the product will be used.
- Use the ROEMHELD product only in perfect technical condition.
- Observe all notes on the product.
- Use only accessories and spare parts approved by the manufacturer in order to exclude danger to persons because of not suited spare parts.
- Respect the intended use.
- You only may start up the product, when it has been found that the incomplete machine or machine, in which the product shall be mounted, corresponds to the country-specific provisions, safety regulations and standards.
- Perform a risk analysis for the incomplete machine, or the machine.

Due to the interactions between the product and the machine/fixture or the environment, risks may arise that only can be determined and minimized by the user, e.g. :

- generated forces,
- generated movements,
- Influence of hydraulic and electrical control,
- etc.

2.5.3 Warning

⚠ WARNING

Injuries due to misuse, incorrect operation or abuse!

Injuries can occur if the product is not used within the intended use and the technical performance data.

- Before start up, read the operating instructions!

2.5.4 Personal protective equipment

 For works at and with the product, wear safety goggles!



For works at and with the product, wear protective gloves!



For works at and with the product, wear safety shoes!

2.5.5 Safety devices

The below safety devices are for the safety of the operators. As a matter of principle no safety devices may be detached, put out of action or modified.

Used safety devices

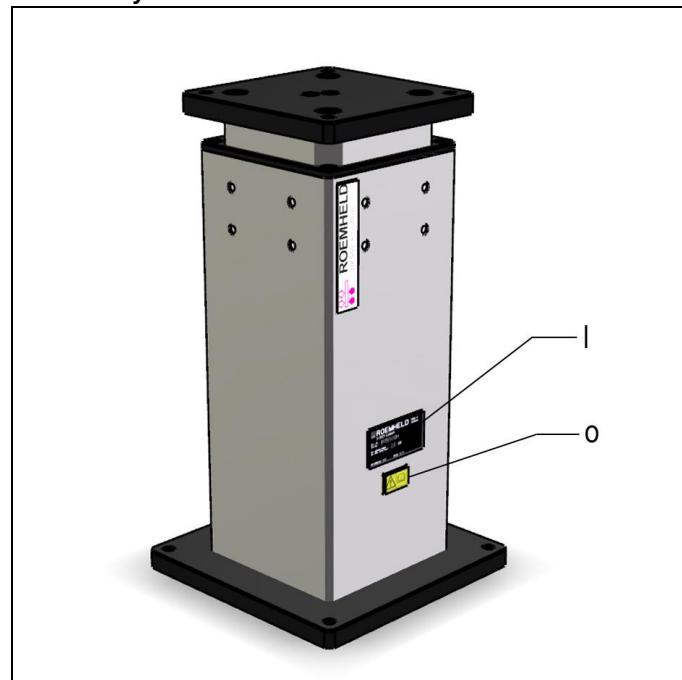


Figure 6: Positions of the safety devices

I	Name plate with details of max. load, etc. (position can vary)	O	Mandatory sign "Read and follow the operation instructions"
---	--	---	---

2.5.5.1 Check the safety devices

NOTE

Use the regulations

- To check the safety device use the check lists "General examination" and / or "Functional testing". Eliminate immediately recognised defects at the safety devices.

Testing intervals

- at the beginning of every shift
- once a week in case of continuous shift
- after each maintenance or repair

Testing content

- Function
- State and position
- Safe fixing

The use of the products is not authorised:

- For domestic use.
- For use at fairgrounds and amusement parks.
- In food processing or in areas with special hygiene regulations.
- In mines.
- In ATEX areas (in explosive and aggressive environments, e.g. explosive gases and dusts).
- If physical effects (welding currents, vibrations or others) or chemically acting media damage the seals (resistance of the seal material) or components and this can lead to functional failure or premature failure.
- For applications other than vertical lifting of loads. Hanging operation (e. g. from the ceiling) is inadmissible.
- Not suitable for applications with strong impact loads or strong vibration.

General examination

Covers	Number, available and undamaged
Screw plugs	Number, available and undamaged
Name plates with specifications	Number, available, readable and undamaged
Danger signs	Number, available and undamaged
Mandatory signs	Number, available and undamaged
Further safety devices available	available, undamaged and ready for operation
Testing date:	Tester (signature):

(Number see "Position of safety devices")

2.6 Application

2.6.1 Intended use

The products are used in industrial applications to occasionally carry out lifting and lowering movements with an electric motor.

Furthermore, the following are intended uses:

- Use within the capacity indicated in the technical data (pay particular attention to the admissible torque load).
- Use as per operating instructions.
- Compliance with service intervals.
- Qualified and trained personnel for the corresponding activities.
- Mounting of spare parts only with the same specifications as the original part.
- Max. push load only with the lifting force indicated below technical characteristics.
- Position of the load's gravity centre within the top plate.
- Use only within closed, low-dust rooms

2.6.2 Misapplication

WARNING

Injuries, material damages or malfunctions!

Modifications can lead to weakening of the components, reduction in strength or malfunctions.

- Do not modify the product!

Special solutions are available on request!

2.7 Installation

2.7.1 Design

WARNING

Injury by dropping parts!

Some products have a heavy weight and can cause injury when dropping.

- Transport products professionally.
- Wear personal protection equipment!

Weight specifications see chapter "Technical characteristics".

CAUTION

Heavy weight may drop

- Some product types have a considerable weight. These have to be secured against dropping during transport.
- Weight specifications see chapter "Technical characteristics".

Transverse forces and forced conditions!

Side loads and forced conditions on the product lead to the premature failure.

- Avoid forced conditions (overdetermination) of the product.
- Max. forces and torques see technical characteristics.



Figure 7: components

1 Bottom plate	3 Top plate
2 Guide unit	4 Linear actuator with connecting cable

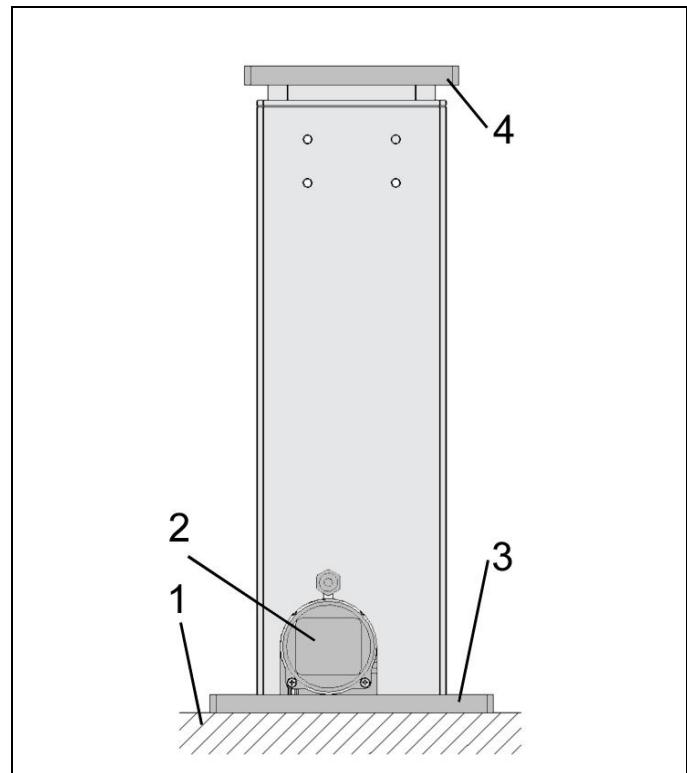


Figure 8: principle of fixing

1 Concrete floor or connecting construction	3 Bottom plate
2 Linear unit	4 Top plate

2.7.2 Fixing of the product

⚠ WARNING

Injury due to overturning product!

- Overturning product due to missing or incorrect fixing!
- Fasten bottom plate on the floor.
- When introducing torques within the load limit (see technical characteristics) we recommend to use an additional base plate (accessory) and to secure this plate correctly.

ℹ NOTE

Use of multiple designated lifting modules with synchronization control

- When using several designated lifting modules with synchronization control, the following conditions must be met:
- All lifting units must be arranged parallel to each other and aligned. Especially in case of high loads on the system, considerable friction forces can occur in case of insufficient parallelism due to deformation of the system which can impair their function. Therefore a bearing with longitudinal compensation or elastic buffer is recommended.
- The load must be located so that a small difference in height of the lifting modules cannot lead to a possible danger of persons.

2.7.3 Mounting of the customer's connecting construction

⚠ WARNING

Injury due to overturning product!

- Overturning product due to eccentric load provided by the user!
- The centre of gravity of the user's load must be within the 4 fixing screws of the bottom plate.
- When introducing torques within the load limit (see technical characteristics) we recommend to use an additional base plate (accessory) and to secure this plate correctly.

1. For fixing of the customer's connecting construction there are 4 bore holes (for M10 - \varnothing 10.5 mm) at the top plate. All provided bore holes have to be used!
2. Fasten the connecting construction at the top plate.

ℹ NOTE

Dangers due to the connecting construction of the customer

Dangers due to the connecting construction of the customer, as e.g. squeezing points have to be excluded by the customer's design.

2.8 Start up

WARNING

Injury / burning due to contact with energized parts!

- Before working on electric equipment, the energized parts must be de-energized and secured.
- Do not open protection covers at electric parts.
- All electrical works must only be realised by electricians.

Check tight seat (check seating torque of the fixing screws).

To operate the lifting modules one of the control modules listed in the following, a hand panel or foot switch and a mains cable is required.

NOTE

Use only original components

- The lifting modules must only be used in conjunction with the components which belong to the system. Components, which do not belong to the system or not permitted devices must under no circumstances be connected.

components

- control module
- Hand panel
- Foot switch
- Mains cables

No. of component see catalog sheet

NOTE

Connection of operating elements

- For the connection of the operating elements and the mains cable as well as the pin assignment see operating instructions BA M8200.

- 1 Connection of the lifting module to the supply unit. The cable bushing of the lifting module must be put into the provided plug connector in the housing of the control module. Then the screw of the cable bushing has to be tightened with a torque of 0.4 Nm.
- 2 Correct fixing of the control module near the lifting module.

2.9 Operation

WARNING

Injuries due to non-compliance of the operating instructions!

- The product may only be operated, if the operating instructions - especially the chapter "Safety instructions" have been read and understood.

Injury by crushing!

Components of the product make a movement while they are in operation, this can cause injuries.

- Keep parts of the body and items out of the working area!

Injuries due to misuse, incorrect operation or abuse!

Injuries can occur if the product is not used within the intended use and the technical performance data.

- Before start up, read the operating instructions!

Risk of injury due to squeezing points in the connecting construction

The connecting construction has to be designed so that there are no squeezing points. The movement of the lifting modules can cause risks for the user in connection with squeezing points.

The operator is obliged to report immediately any changes to the product that may affect safety to the safety expert or to the person who is responsible for safety and to stop operating the product.

2.9.1 Workstation

The workstation is intended to be positioned in front of the product.

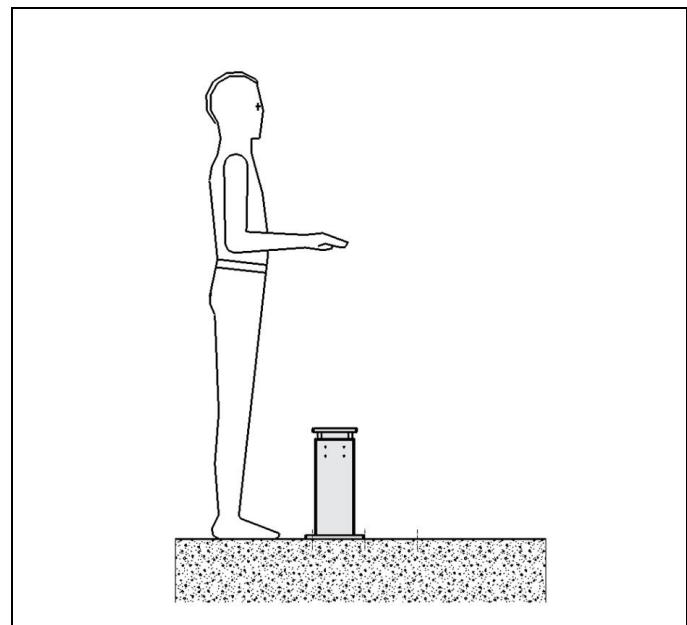


Fig. 9: Workstation

2.10 Handling emergency situations

The product may not be operated if there is an emergency situation.

2.10.1 Lifting and lowering

It is operated in conjunction with a control module and operating elements. Further possibilities of operation and control can be found in the corresponding operating instructions.

By operating the direction key lifting (↑) or lowering (↓) at the hand panel or foot switch the lifting module will be extended or retracted. Due to the touch control, the respective direction key must remain actuated during the lifting or lowering.

An electronic current limitation in the supply unit protects the lifting module against overload. If for example in case of overload the lifting module is working longer than 1 second in the range of the current limitation, the lifting module will be switched off. The function is restored after release of the push-button operation.



Figure 10: hand panel and foot switch



2.11 Maintenance

2.11.1 Service life

The service life is:

250 operating hours (only time required for stroke) for the units 2 kN and 4 kN with duty cycle 15%, 1.5 min ON

60 operating hours (only time required for stroke) for the units 6 kN with duty cycle 15%, 1.5 min ON

2.11.2 Plan for maintenance

Maintenance works	Interval	by...
Cleaning, visual check of the lifting module and inspection of the guide unit	daily	operator
Check all fixing screws and cable fixings and fittings, retighten if required. control of the guide unit	half-yearly checks	expert
The electrical components of the lifting module are to be checked by an expert at regular intervals, but at least once a year.	yearly checks	expert
Repair	in case of damages	ROEMHELD service staff

NOTE

Pay attention to the qualification of the personnel.

2.11.3 Cleaning

WARNING

Danger of injury due to a lifting or lowering movement!

- Do not reach into the stroke area during the lifting or lowering movement.

The following cleaning works have to be effected daily at the mechanical components.

- Clean with cleaning clothes or cleaning rags.
- Slightly lubricate the metallic components (plates, guides, etc.).

2.11.3.1 Daily checks

WARNING

Danger of injury due to a lifting or lowering movement!

- Switch off the mains before cleaning and maintenance works.
- Visual check of the lifting module
- Check the guide unit for damages and possible running marks, repair if required.

2.11.3.2 Half-yearly checks

WARNING

Danger of injury due to a lifting or lowering movement!

- Switch off the mains before cleaning and maintenance works.
- Check all fixing screws of the lifting module, retighten if required.

- Check the wear of the guide unit based on the guiding clearance. If the clearance exceeds 0.5 mm, the guiding elements have to be exchanged. (See chapter Repair).

2.11.3.3 Yearly checks

WARNING

Danger of injury due to a lifting or lowering movement!

- Switch off the mains before cleaning and maintenance works.

The electrical components of the lifting module are to be checked by an expert at regular intervals, but at least once a year. The check includes:

- The perfect functioning
- The state of the component
- Check the Occupational Health and Safety Regulations of the trade associations (German DGUV Vorschrift 3)

2.11.4 Repair

Repair works, as e.g. the change of internal linear actuator may only be effected by the service technicians of the company Römhild.

2.12 Trouble shooting

CAUTION

All work by service personnel only!

- All works only to be effected by ROEMHELD service staff.

Trouble	Cause	Remedy
Top plate does not lift or lower after the operation of the push-button	Interior linear actuator defect	Linear actuator to be replaced by ROEMHELD service personnel
Top plate lowers without operation of the push-button	Interior linear actuator defect	Linear actuator to be replaced by ROEMHELD service personnel

2.13 Technical characteristics

Max. lifting force	1000, 2000, 4000, 6000 N
Stroke	200, 300, 400, 500, 600 mm
Functional principle	Electrical
Duty cycle	15% 1.5 min. ON
Code class	IP 54
Control voltage	24VDC
Protection class	II
Operation	Hand panel or foot pedal
Lifting profile	Aluminium, colourless anodised
Top and bottom plate	aluminium, black anodised

NOTE

The maximum pull force of the electro-mechanical version is 80 % of the push force!

Variant E: not suitable for synchronization

Type	Lifting force [N]	v_H [mm/s]	I [A]
8915-01-XX-E	1000	32 ... 28	7
8915-02-XX-E	2000	18 ... 16	5
8915-04-XX-E	4000	10 ... 8	6
8915-06-XX-E	6000	7 ... 5	7.5

Variant I: suitable for memory function

Type	Lifting force [N]	v_H [mm/s]	I [A]
8915-02-XX-I	2000	18 ... 16	5
8915-04-XX-I	4000	10 ... 8	6
8915-06-XX-I	6000	7 ... 5	7.5

Variant B: suitable for memory function and battery mode

Type	Lifting force [N]	v_H [mm/s]	I [A]
8915-01-XX-B	1000	32 ... 28	7
8915-02-XX-B	2000	18 ... 16	5
8915-04-XX-B	4000	10 ... 8	6
8915-06-XX-B	6000	7 ... 5	7.5

Variant G: suitable for synchronization

Type	Lifting force [N]	v_H [mm/s]	I [A]
8915-02-XX-G	2000	18 ... 16	5
8915-04-XX-G	4000	8 ... 6	4.5
8915-06-XX-G	6000	6 ... 4	5.5

 v_H = Lifting speed, load-dependent:

I = Current consumption, load-dependent

Variant E, I, B and G

Type	Stroke [mm]	Weight [kg]
8915-XX-20-X	200	14
8915-XX-30-X	300	16
8915-XX-40-X	400	19
8915-XX-50-X	500	21
8915-XX-60-X	600	24

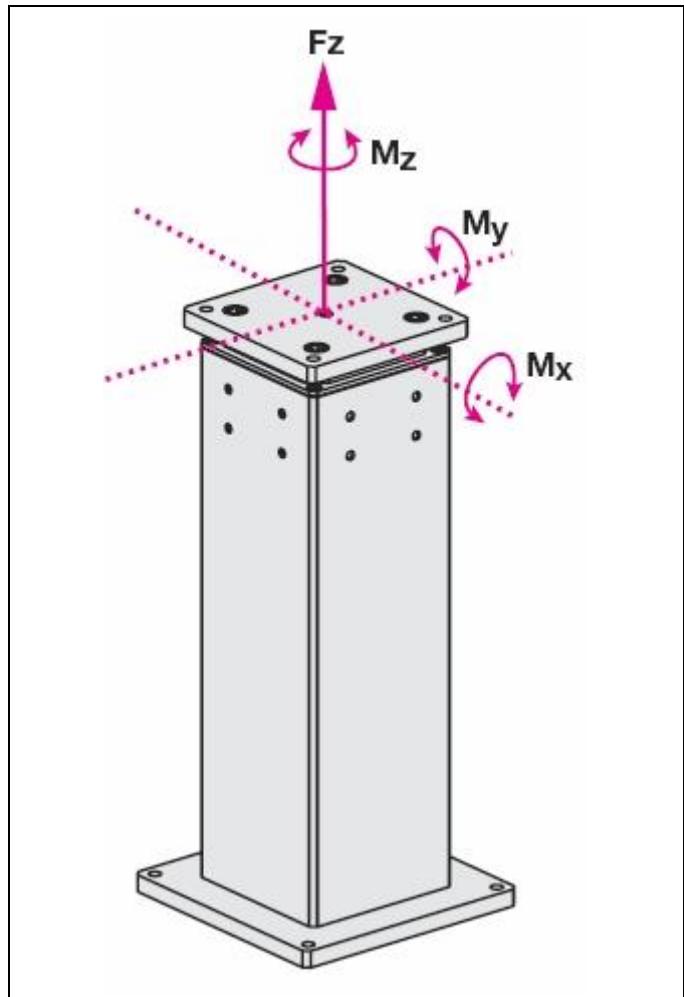
Side loads


Figure 11: Side loads

Max. load torque M_z	300 Nm
Max. load torque M_x or M_y	500 Nm

Tightening torques

The tightening torques for the fixing screws of the customer's connecting construction are to be taken from the VDI guideline 2230.

Emissions

The A valued continuous sound level is less than 70 dB(A) in operation.

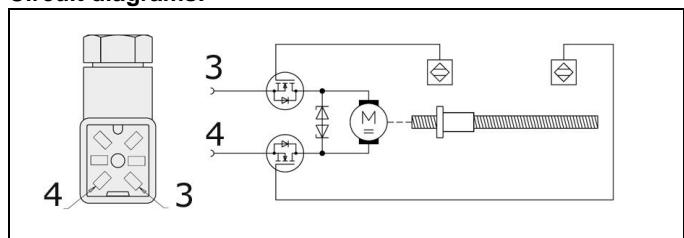
Circuit diagrams:


Figure 12: Lifting module standard (8915-0X-X0-E)

3 brown + (extend) - (retract)	4 blue - (extend) + (retract)
--------------------------------------	-------------------------------------

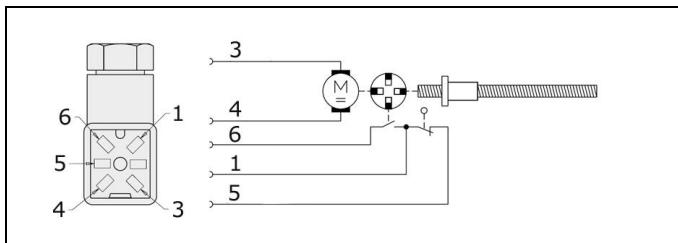


Figure 13: Lifting module with incremental measuring system
 (8915-0X-X0-X)

3 brown + (extend) - (retract)	6 red = pulse generator 1 yellow = COM
4 blue - (extend) + (retract)	5 black = limit switch

2.14 Accessory

NOTE

Accessories

- See data sheet.

2.15 Disposal

Hazardous to the environment



Due to possible environmental pollution, the individual components must be disposed only by an authorised expert company.

The individual materials have to be disposed as per the existing regulations and directives as well as the environmental conditions.

For the disposal of electrical and electronic components (e.g. stroke measuring systems, proximity switches, etc.) country-specific legal regulations and specifications have to be kept.

2.16 Declaration of conformity**Manufacturer**

Römheld GmbH Friedrichshütte
Römheldstraße 1-5
35321 Laubach, Germany
Tel.: +49 (0) 64 05 / 89-0
Fax: +49 (0) 64 05 / 89-211
E-mail: info@roemheld.de
www.roemheld.com

Responsible person for the documentation:

Dipl.-Ing. (FH) Jürgen Niesner, Tel.: +49(0)6405 89-0.

This declaration of conformity applies to the following products:

Electro-mechanical lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-01-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-02-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-04-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-06-20-E, -30-E, -40-E, -50-E, -60-E

- 8915-02-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-04-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-06-20-G, -30-G, -40-G, -50-G, -60-G

- 8915-02-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-04-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-06-20-I, -30-I, -40-I, -50-I, -60-I

- 8915-01-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-02-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-04-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-06-20-B, -30-B, -40-B, -50-B, -60-B

We hereby declare that the machine described in its design and construction as well as in the version we have placed on the market complies with the essential health and safety requirements according to the following EC directives.

The following additional EU directives were applied:

- **2006/42/EC**, Machinery directive [www.eur-lex.europa.eu]

2014/30/EU EMC - Electromagnetic compatibility [www.eur-lex.europa.eu]

The following harmonised standards have been applied:

Product Safety Act - ProdSG; [editor: Federal Ministry of Justice and Consumer Protection, Germany]

DIN EN ISO 12100, 2011-03, Safety of machinery; Basic concepts, General principles for design (replacement for part 1 and 2)

DIN EN 60204-1; 2007-06, Safety of machinery - Electrical equipment of machines, Part 1: General requirements

DIN EN 61000-6-2; 2005, Electromagnetic compatibility, immunity for industrial environments

DIN EN 61000-6-4; 2007, Electromagnetic compatibility, generic standards - emission standard for industrial environments

The technical documents according to the specified guidelines were created for the products.

The manufacturer obligates to provide the special documentation of the products to national authorities on demand.

If the product is modified and not approved by us, this declaration will become invalid.

Laubach, 17.01.2025

Ewgeni Schleining
Development Team Leader MH

Römheld GmbH
Friedrichshütte

2.17 Declaration of conformity



The technical documents according to the specified guidelines were created for the products.
The manufacturer obligates to provide the special documentation of the products to national authorities on demand.

If the product is modified and not approved by us, this declaration will become invalid.

SG4 0TY Hitchin, 17.01.2025



Darren Rowell
Managing Director,

Roemheld UK Ltd

Importer
Roemheld (UK) Limited
28 Knowl Piece, Wilbury Way,
SG4 0TY Hitchin

E-Mail: sales@roemheld.co.uk
www.roemheld.co.uk

Authorised person to compile the technical documentation:

Darren Rowell, 28 Knowl Piece, Wilbury Way, SG4 0TY
Hitchin.

This declaration of conformity applies to the following products:

Electro-mechanical lifting modules of data sheet M 4.301.

The following types or part numbers are concerned:

- 8915-01-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-02-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-04-20-E, -30-E, -40-E, -50-E, -60-E
- 8915-06-20-E, -30-E, -40-E, -50-E, -60-E

- 8915-02-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-04-20-G, -30-G, -40-G, -50-G, -60-G
- 8915-06-20-G, -30-G, -40-G, -50-G, -60-G

- 8915-02-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-04-20-I, -30-I, -40-I, -50-I, -60-I
- 8915-06-20-I, -30-I, -40-I, -50-I, -60-I

- 8915-01-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-02-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-04-20-B, -30-B, -40-B, -50-B, -60-B
- 8915-06-20-B, -30-B, -40-B, -50-B, -60-B

We hereby declare that the machine described in its design and construction as well as in the version we have placed on the market complies with the essential health and safety requirements according to the following UKCA directives.

The following additional UKCA directives were applied:

- **Directive 2008 No. 1597**, Health and Safety
- **Directive 2016 No. 1091**, Electromagnetic Compatibility

The following harmonised standards have been applied:

Product Safety Act - ProdSG; [editor: Federal Ministry of Justice and Consumer Protection, Germany]

DIN EN ISO 12100, 2011-03, Safety of machinery; Basic concepts, General principles for design (replacement for part 1 and 2)

EN 1494; 2008, Mobile or movable jacks and associated lifting equipment

DIN EN ISO 4413, 2011-04, Hydraulic fluid power - General rules and safety requirements for systems and their components